

V1.1 2009. 12.31

RemoDAQ-8366 Module User's Manual



Beijing Gemotech Intelligent Technology Co., Ltd

Contents

Contents.....	2
Chapter1. Products Introduction.....	3
1.1 General Introduction	3
1.2 Pin Assignment	4
1.3 Features.....	4
1.3.1 Introduction.....	4
1.3.2 Digital Input.....	4
1.3.3 Relay Output.....	5
1.4 Wiring Instruction	6
1.5 Function Introduction	7
1.5.1 Power-on Initialization.....	7
1.5.2 DI Working Mode	7
1.5.3 DO Working mode	8
Chapter2. Command.....	9
2.1 Command Structure	9
2.2 Modbus Function Code Introductions	10
2.....	错误！未定义书签。
3 RemoDAQ-8366 MODBUS RTU Address Image Table	错误！未定义书签。
Chapter3. Software Instruction.....	19

Chapter1. Products Introduction

1.1 General Introduction

RemoDAQ-8300 Ethernet-based data acquisition and control modules provide I/O, data acquisitions, and networking in one module to build a cost effective, distributed monitoring and control solution for a wide variety of applications. Through standard Ethernet networking, RemoDAQ-8300 retrieves I/O values from sensors, and can publish them as a real-time I/O values to networking nodes via LAN, Intranet, or Internet. With Ethernet-enabled technology, RemoDAQ-8300 series modules build up a cost-effective DA&C system for Building Automation, Environmental Monitoring, Facility Management and eManufacturing applications.

RemoDAQ-8366 is a high-density I/O module with a 10/100 base-T interface for seamless Ethernet connectivity. RemoDAQ-8366 offers 6 high voltage power relay (form A) output and 6 digital input channels. It supports contact rating as AC 250V@5A, and DC 30V@5A. All of the digital input channels support input latch function for signal handling. Meanwhile, these DI channels can be used as 3 KHz counter and frequency input channels. Opposite to the intelligent DI functions, the digital output channels also support pulse output function.

1.2 Pin Assignment

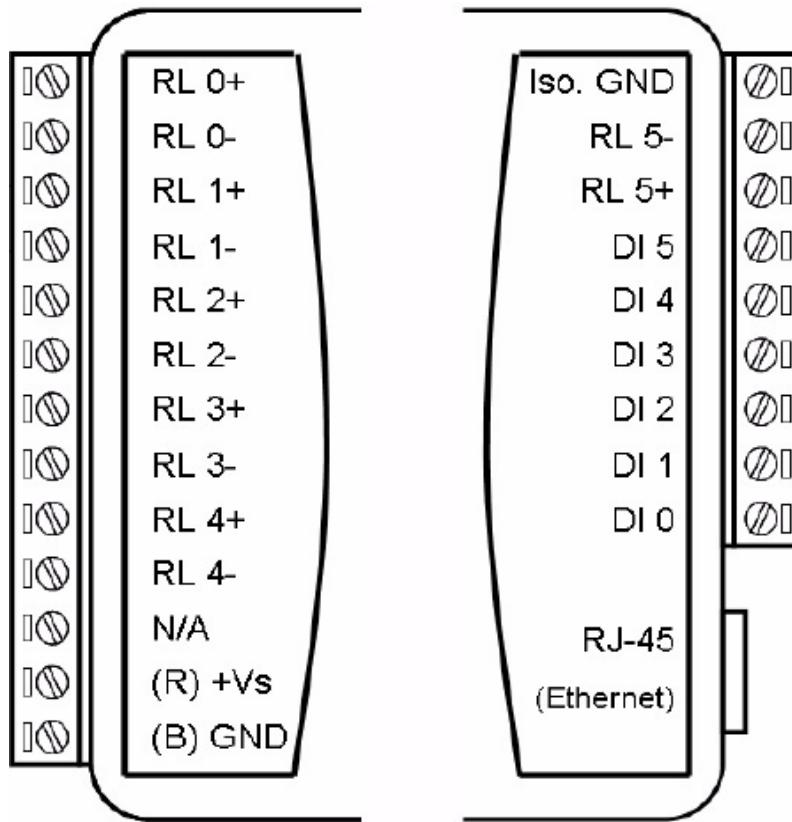


Figure 1.1

1.3 Features

1.3.1 Introduction

- Support 10/100M Ethernet
- Support Modbus/TCP
- Input Voltage: +10V~+30VDC
- Power Consumption: 1.5W
- Temperature: -20°C~70°C
- Humidity: 5%~90%, no condensing
- Isolation: 3000VDC
- Watchdog

1.3.2 Digital Input

- Channels: 6

- Dry Contact:
 - Logic 0: Grand
 - Logic 1: Open
- Wet Contact:
 - Logic 0: 0 ~ 3 VDC
 - Logic 1: 10 ~ 30 VDC
- Support 3 kHz counter (32 bit+ 1bit overflow bit)
- Support “high—low” or “low—high” latch
- Support 3 kHz frequency measurement

1.3.3 Relay Output

- Channels : 6 (Form A)
- Contact Power:
 - AC: 5A@250VAC
 - DC: 5A@30VDC
- Surge Voltage: 4000V
- Pick-up Time: 6ms
- Release Time: 3ms
- Min fault-free Time: 10^5 ops
- Support 3 kHz pulse output

1.4 Wiring Instruction

Digital input wiring instruction

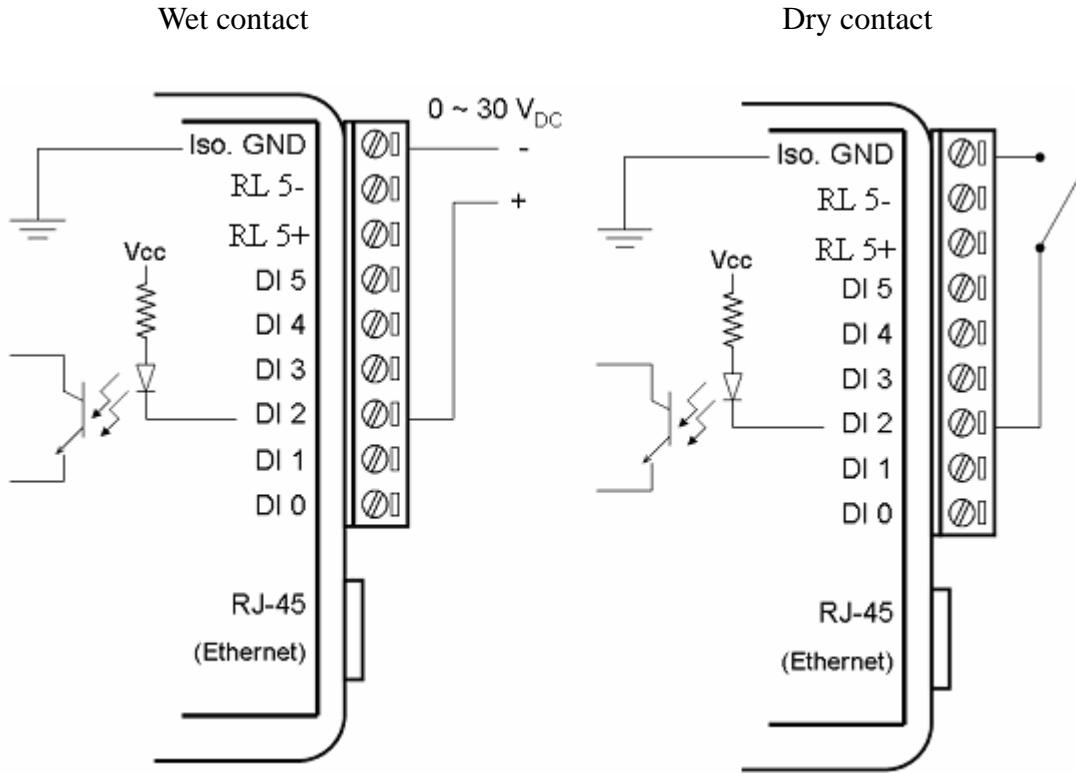


Figure 1.2

Digital input wiring instruction

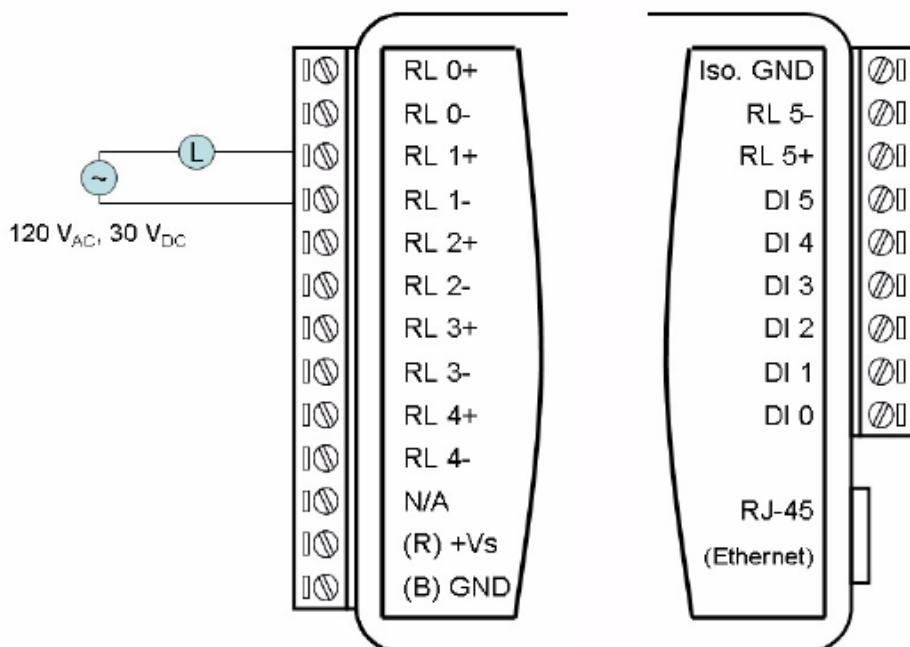


Figure 1.3

1.5 Function Introduction

1.5.1 Power-on Initialization

After being power-on, the module will read out the data EEPROM, configuration-related registers, such as: pulse output width, absolute pulse, incremental pulse, module's name, module's version register, DI mode and DO Mode. Each of these registers is configured correctly by the user, then the module will write this configuration information once for the corresponding EEPROM address.

1.5.2 DI Working Mode

1. DI (default)

When a DI channel Mode Register is set as 00 (see 2.3 RemoDAQ-8366 MODBUS RTU address of the image table), the channel is in Normal DI Mode. In this mode, the channel is only collected the current state of the DI.

2. Counter

When a DI channel Mode Register is set as 01 (see 2.3 RemoDAQ-8366 MODBUS RTU address of the image table), the channel is in Counter Mode. In this mode, when "Counter Start (1)/Stop (0)" bit is 1, the counter will start counting, counts need to read the corresponding register. Users can set the "Clear Counters (1)" bit to 1, clear the current count.

3. Low to High Latch

When a DI channel mode register is set as 02 (see 2.3 RemoDAQ-8366 MODBUS RTU address of the image table), the channel is in the Low - High Latch Mode. In this model, once the digital input channel detects logic level changes from low to high, the "DI Latch State" bit will remain the logic high. "DI Latch State" bit value will remain unchanged until the user to read this one before they are automatically cleared.

4. High to Low Latch

When a DI channel mode register is set as 03 (see 2.3 RemoDAQ-8366 MODBUS RTU address of the image table), the channel is in the High - Low Latch Mode. In this model, once the digital input channel detects logic level changes from high to low, the "DI Latch State" bit will remain the logic high. "DI Latch State" bit value will remain unchanged until the user reads this one before they are automatically cleared.

5. Frequency

When a DI channel mode register is set as 04 (see 2.3 RemoDAQ-8366 MODBUS RTU address of the image table), the channel is in the Frequency mode. When you choose Frequency mode, RemoDAQ-8366 digital module will calculate the frequency value of the digital input signal from the selected

channel. The frequency value (per second refresh) will be stored in the corresponding channel's Frequency Value Register (such as: 0 channel, the counter value exists in 40001~40002, Frequency value exists in 40001)

1.5.3 DO Working mode

1. DO (default)

When a DO channel mode register is set as 00 (see 2. 3 RemoDAQ-8366 MODBUS RTU address of the image table), the channel is in DO mode. In this mode, the operation of that channel will be the corresponding digital output.

2. Pulse Output

When a DO channel mode register is set as 01 (see 2. 3 RemoDAQ-8366 MODBUS RTU address of the image table), the channel is in Pulse Output mode. The pulse output is the same as PWR. After you choose the Pulse output mode, the selected digital output channel can generate continuous pulse train or finite pulses. The user can define the " Pulse Output Low Level Width," " Pulse Output High Level Width," " Set Absolute Pulse " and " Set Incremental Pulse," ,then a corresponding pulse will generate.

Chapter2. Command

RemoDAQ-8300 systems accept a command/response form with the host computer. When systems are not transmitting they are in listen mode. The host issues a command to a system with a specified address and waits a certain amount of time for the system to respond. If no response arrives, a time-out aborts the sequence and returns control to the host. This chapter explains the structure of the commands with Modbus/TCP protocol.

2.1 Command Structure

It is important to understand the encapsulation of a Modbus request or response carried on the Modbus/TCP network. A complete command is consisted of command head and command body. The command head is prefixed by six bytes and responded to pack Modbus format; the command body defines target device and requested action. Following example will help you to realize this structure quickly.

Example:

If you want to read the first two values of RemoDAQ-8366 (address:40001~40002), the request command should be:

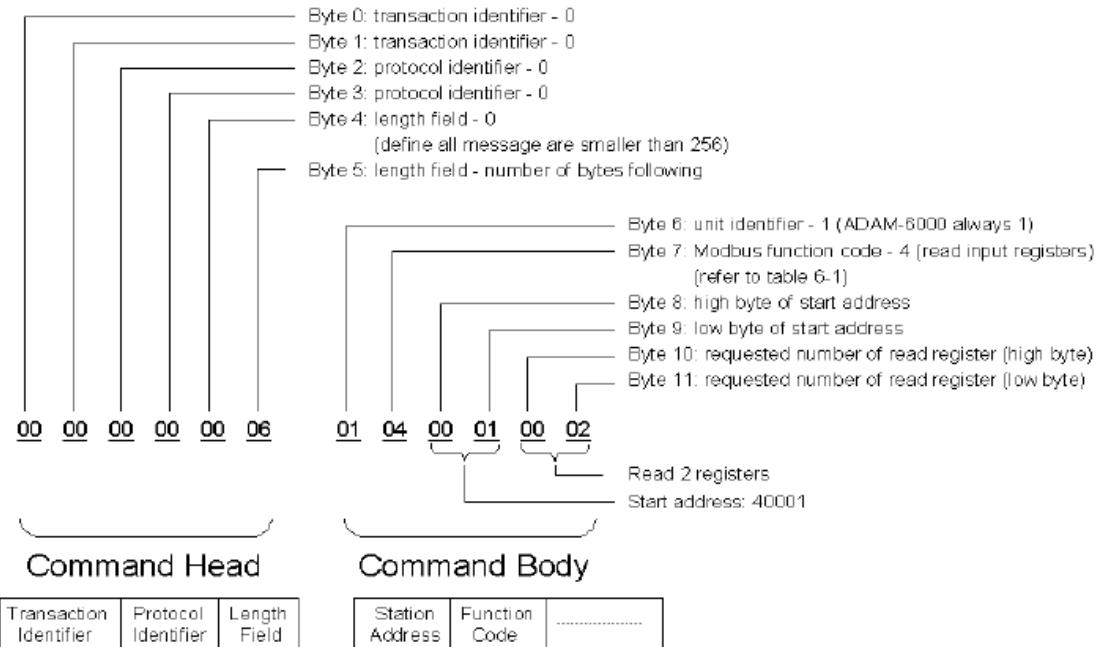
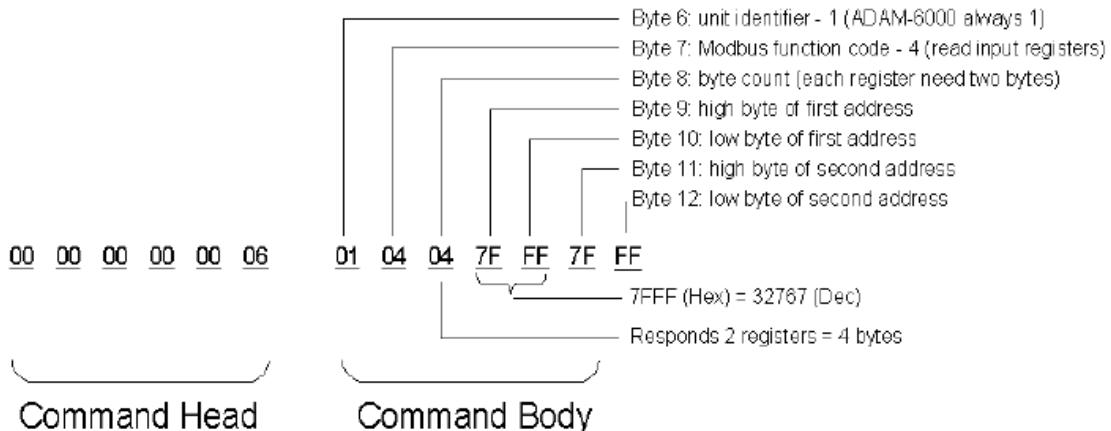


Figure2.1 Request Comment Structure

**Figure2.2 Response Comment Structure**

2.2 Modbus Function Code Introductions

To full-fill the programming requirement, there is a series of function code standard for user's reference...

Function Code 01

The function code 01 is used to read the discrete output's ON/OFF status of RemoDAQ-8300 modules in a binary data format.

Request message format for function code 01:

Command Body					
Station Address	Function Code	Start Address High Byte	Start address Low Byte	Requested Number of Coil High Byte	Requested Number of Coil Low Byte
01	01	00	10	00	08

Example: Read coil number 1 to 8 (address number 00017 to 00024) from RemoDAQ-8300 Modules

01 01 00 10 00 08

Response message format for function code 01:

Command Body					
Station Address	Function Code	Byte Count	Data	Data	...
01	01	01	42		

Example: Coils number 2 and 7 are on, all others are off.

01 01 01 42

In the response the status of coils 1 to 8 is shown as the byte value 42 hex, equal to 0100 0010 binary.

Function Code 02

The function code 02 is used to read the discrete input's ON/OFF status of RemoDAQ-8300 in a binary data format.

Request message format for function code 02:

Command Body					
Station Address	Function Code	Start Address High Byte	Start address Low Byte	Requested Number of Coil High Byte	Requested Number of Coil Low Byte

Example: Read coil number 1 to 8 (address number 00001 to 00008) from RemoDAQ-8300 modules

01 01 00 01 00 08

Response message format for function code 01:

Command Body					
Station Address	Function Code	Byte Count	Data	Data	...

Example: input number 2 and 3 are on, all others are off.

01 01 01 60

In the response the status of input 1 to 8 is shown as the byte value 60 hex, equal to 0110 0000 binary.

Function Code 03/04

The function code 03 or 04 is used to read the binary contents of input Registers.

Request message format for function code 03 or 04:

Command Body					
Station Address	Function Code	Start Address High Byte	Start address Low Byte	Requested Number of Register High Byte	Requested Number of Register Low Byte

Example: Read register 40002 to 40003 hex in RemoDAQ-8300 module

01 04 00 01 00 02

Response message format for function code 03 or 04:

Command Body					
Station Address	Function Code	Byte Count	Data	Data	...

Example: Values where register 40002= 0043H and register 40003= 21H
 01 04 04 00 43 00 21

Function Code 05

Force a single coil to either ON or OFF. The requested ON/OFF state is specified by a constant in the query data field. A value of FF 00 hex requests it to be ON. A value of 00 00 hex requests it to be OFF. And a value of FF FF hex requests it to release the force.

Request message format for function code 05:

Command Body					
Station Address	Function Code	Coil Address High Byte	Coil address Low Byte	Force Data High Byte	Force Data Low Byte

Example: Force coil 3 (address 00003) ON in RemoDAQ-8300 module

01 05 00 03 FF 00

Response message format for function code 05:

The normal response is an echo of the query, returned after the coil state has been forced.

Command Body					
Station Address	Function Code	Coil Address High Byte	Coil address Low Byte	Force Data High Byte	Force Data Low Byte

Function Code 06

Presets integer value into a single register.

Request message format for function code 06:

Command Body					
Station Address	Function Code	Register Address High Byte	Register address Low Byte	Preset Data High Byte	Preset Data Low Byte

Example: Preset register 40002 to 00 04 hex in RemoDAQ-8300 module

01 06 00 02 00 04

Response message format for function code 06:

The normal response is an echo of the query, returned after the coil state has been preset.

Function Code 15 (0F hex)

Forces each coil in a sequence of coils to either ON or OFF.

Request message format for function code 15:

Command Body								
Station Address	Function Code	Start Address High Byte	Start Address Low Byte	Requested Number of Coil High Byte	Requested Number of Coil Low Byte	Byte Count	Force Data High Byte	Force Data Low Byte

Example: Request to force a series of 10 coils starting at address 00017 (11 hex) in RemoDAQ-8300 module.

01 0F 00 11 00 0A 02 CD 01

The query data contents are two bytes: CD 01 hex, equal to 1100 1101 0000 0001 binary. The binary bits are mapped to the addresses in the following way.

Bit: 1 1 0 0 1 1 0 1 0 0 0 0 0 0 0 1

Address (000XX): 24 23 22 21 20 19 18 17 ----- 26 25

Response message format for function code 15:

The normal responses return the station address, function code, start address, and requested number of coil forced.

Command Body					
Station Address	Function Code	Start Address High Byte	Start Address Low Byte	Requested Number of Coil High Byte	Requested Number of Coil Low Byte

Example: 01 0F 00 11 00 0A

Function Code 16 (10 hex)

Preset values into a sequence of holding registers.

Request message format for function code 16:

Command Body							
Station Address	Function Code	Start Address High Byte	Start Address Low Byte	Requested Number of Register High Byte	Requested Number of Register Low Byte	Byte Count	Data

Example: Preset address 40001 to 1234H and address 40002 to 5678H in RemoDAQ-8300 module.

01 10 00 00 00 02 04 12 34 56 78

Response message format for function code 08:

The normal responses return the station address, function code, start address, and requested number of registers preset.

Command Body					
Station Address	Function Code	Start Address High Byte	Start Address Low Byte	Requested Number of Register High Byte	Requested Number of Register Low Byte
Example: 01	10	00	00	00	02

2.3 RemoDAQ-8366 MODBUS RTU Address Mapping

Table

Table 2-1

address 0X(Decimal)	Hex	Channel number	Content	attribute	Description
0001	00H	0	Current value	Read	DI0
0002	01H	1	Current value	Read	DI1
.....
006	05H	5	Current value	Read	DI5
0017	10H	0	Current value	Read/Write	DO0
0018	11H	1	Current value	Read/Write	DO1
.....
0022	15H	5	Current value	Read/Write	DO5
0033	20H	0		Read/Write	Counter Start(1)/Stop(0)
0034	21H			Write	Clear Counter(1)
0035	22H			Read/Write	Counter Overflow ③
0036	23H			Read/Write	Input Latch Status ④
0037	24H	1		Read/Write	Counter Start(1)/Stop(0)
0038	25H			Write	Clear Counter(1)
0039	26H			Read/Write	Counter Overflow ③
0040	27H			Read/Write	Input Latch Status ④
0041	28H	2		Read/Write	Counter Start(1)/Stop(0)
0042	29H			Write	Clear Counter(1)
0043	2AH			Read/Write	Counter Overflow

					(③)
0044	2BH	3		Read/Write	Input Latch Status ④
0045	2CH			Read/Write	Counter Start(1)/Stop(0)
0046	2DH			Write	Clear Counter(1)
0047	2EH			Read/Write	Counter Overflow ③
0048	2FH			Read/Write	Input Latch Status ④
0049	30H	4		Read/Write	Counter Start(1)/Stop(0)
0050	31H			Write	Clear Counter(1)
0051	32H			Read/Write	Counter Overflow ③
0052	33H			Read/Write	Input Latch Status ④
0053	34H	5		Read/Write	Counter Start(1)/Stop(0)
0054	35H			Write	Clear Counter(1)
0055	36H			Read/Write	Counter Overflow ③
0056	37H			Read/Write	Input Latch Status ④
address 4X(Decimal)	Hex	Channel number	Content	attribute	Description
40001 ~ 40002	0H ~ 1H	0	Current Counter Value	Read	Counter Value ①
40003 ~ 40004	2H ~ 3H	1	Current Counter Value	Read	
.....	
40011 ~ 40012	0AH 0BH	~ 5	Current Counter Value	Read	
40013 ~ 40014	0CH 0DH	~ 0	Pulse width	Read/Write	Pulse output width of low level ②
40015 ~ 40016	0EH 0FH	~ 1		Read/Write	

.....	
40023 ~ 40024	16H 17H	~ 5		Read/Write	
40025 ~ 40026	18H 19H	~ 0		Read/Write	
40027 ~ 40028	1AH 1BH	~ 1		Read/Write	Pulse output width of high level ②
.....	
40035 ~ 40036	22H 23H	~ 5		Read/Write	
40037 ~ 40038	24H 25H	~ 0		Read/Write	
40039 ~ 40040	26H 27H	~ 1		Read/Write	Pulse Quantity ⑤
.....	
40047 ~ 40048	2EH 2FH	~ 5		Read/Write	
40049 ~ 40050	30H 31H	~ 0		Read/Write	
40051 ~ 40052	32H 33H	~ 1		Read/Write	Additional Pulse Quantity ⑥
.....	
40059 ~ 40060	3AH 3BH	~ 5		Read/Write	
40211	D2		Name	Read	83H, 66H
40213	D4		Version	Read/Write	A1H, 00H
40257	100H	0	DI Mode Register	Read/Write	00H, VVH⑦
40258	101H	1	DI Mode Register	Read/Write	00H, VVH⑦
.....
40262	105H	5	DI Mode Register	Read/Write	00H, VVH⑦
40273	110H	0	DO Mode Register	Read/Write	00H, SSH⑧
40274	111H	1	DO Mode	Read/Write	00H, SSH⑧

			Register		
.....
40278	115H	5	DO Mode Register	Read/Write	00H, SSH⑧
40301	12CH	ALL	DI	Read/Write	
40303	12EH	ALL	DO	Read/Write	

Note:

- ① How to retrieve the counter/frequency value:
Counter (decimal) = (value of 40002) * 65536 + (value of 40001)
Frequency (decimal) = value of 40001
- ② Time Unit: 0.1ms.
- ③ If the count number is overflow, this bit will be 1. Once this bit is read, the value will return to 0.
- ④ When DI channel is configured as “High to low latch” or “Low to high latch”, this bit will be 1 if the latch condition occurs. After that, value of this bit will keep 1 until user writes 0 to this bit (clear the latch status).
- ⑤ Decide how many pulses will be generated. When user writes 0 to this bit, it will continuously generate pulse.
- ⑥ During the pulse generation, user can use this bit to generate more pulses. For example, “Absolute pulse” is set as 100. During its generation, user can set “Incremental pulse” as 10. After the 100 pulses are generated, the extra 10 pulses will continue to be generated.

⑦DI mode:

:

VV	00	01	02	03	04
DI mode	DI	Count	low to high Latch	High to Low Latch	Frequency

⑧DO mode:

SS	00	01
DI working mode	Ordinary DO	Pulse output

Chapter3. Software Instruction

- 1、Click RemoDAQ-8300 Series Ethernet IO Module Utility.exe installation tool software.

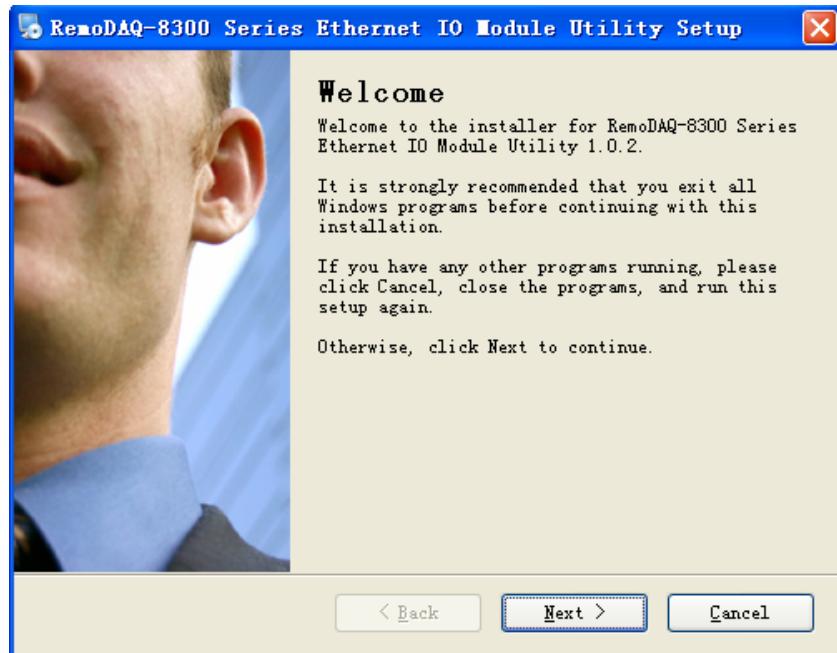


Figure3.1

- 2、Click Next, install according to instruction.

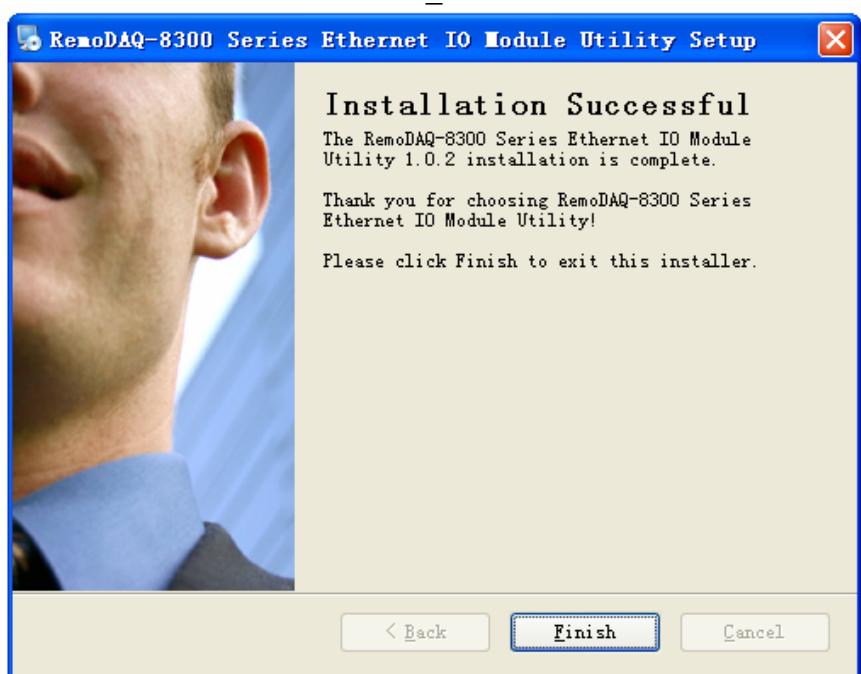


Figure3.2

- 3、Click Finish, installation ends.
- 4、Generate shortcut icon on the desktop



Figure3.3

- 5、Click the icon to enter the interface.

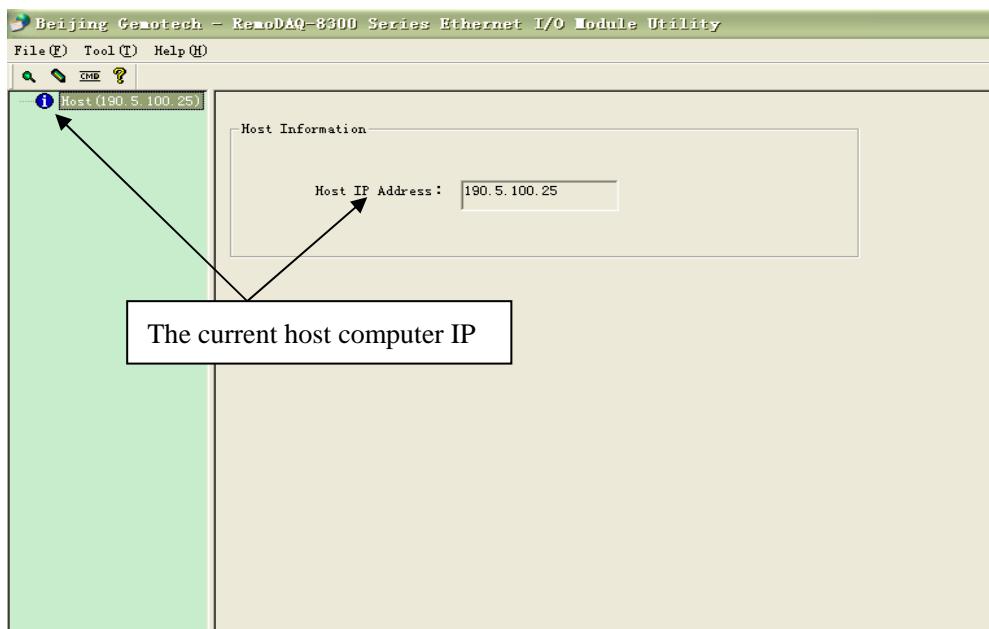


Figure3.4

- 6、Click the magnifying Figure and search module

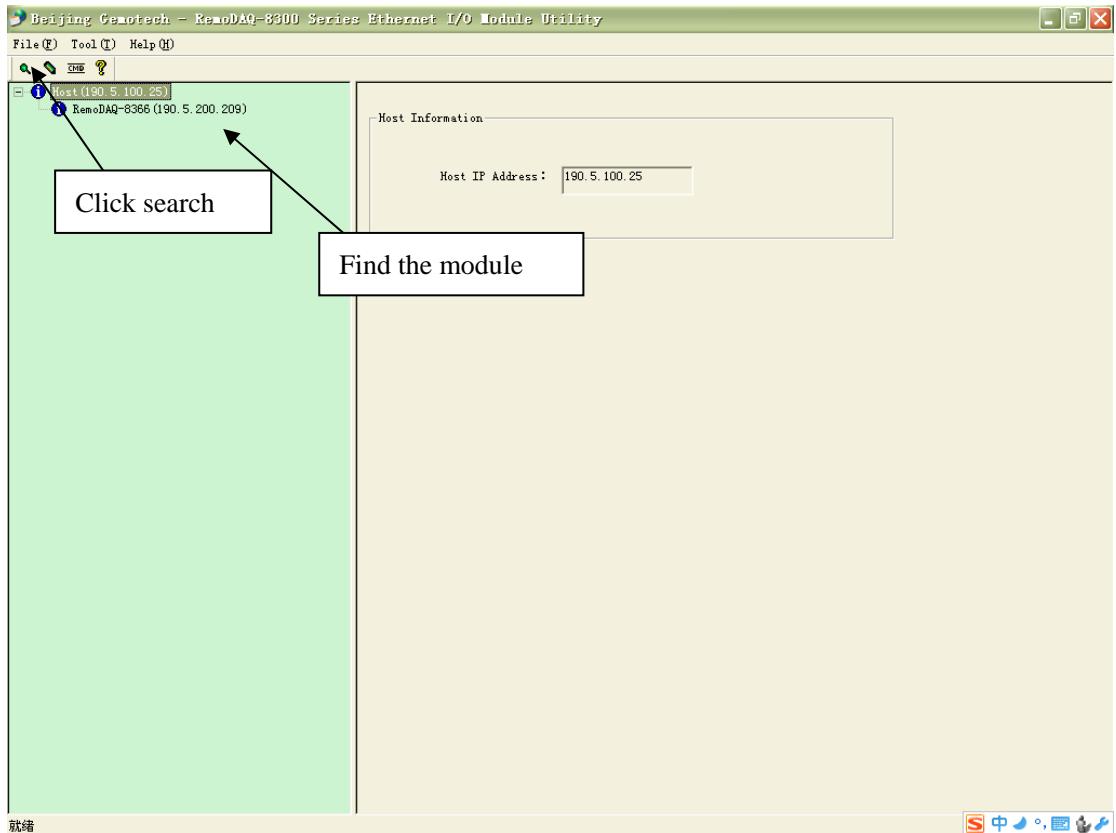


Figure3.5

7、Click RemoDAQ-8366(That is, the red marked section)

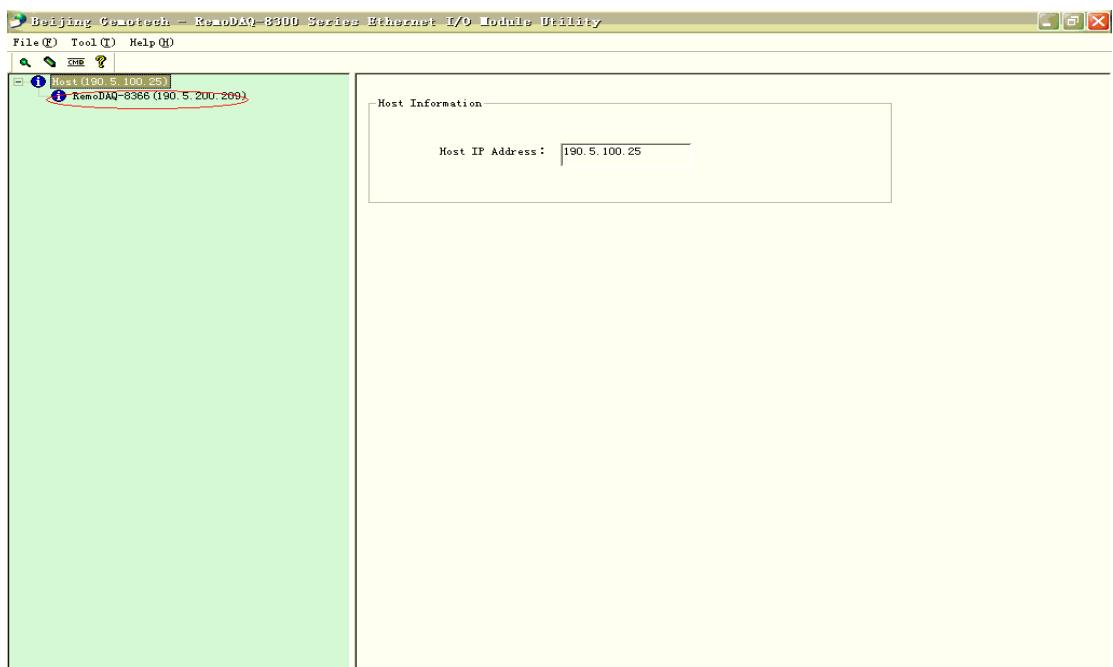


Figure3.6

8、Enter “Networks” Setting to set network source, RemoDAQ-8366 network port number is 8000。

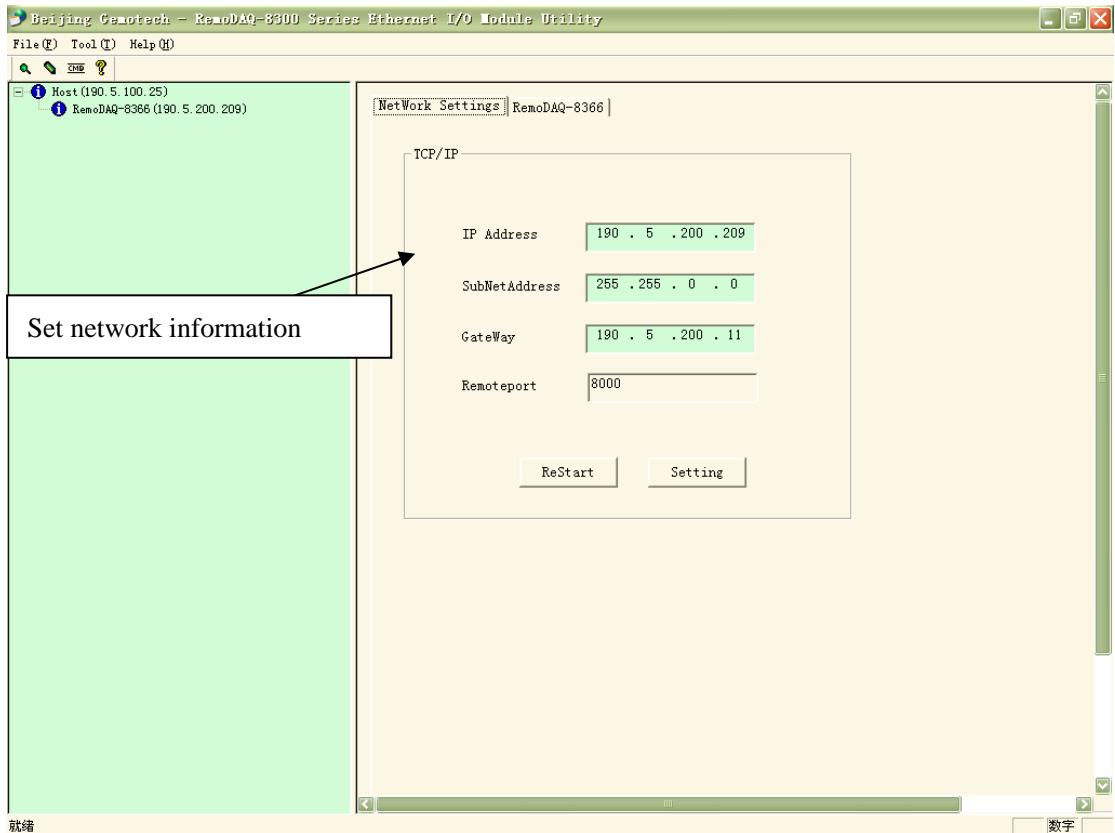


Figure3.7

9、After setting, click Setting and then click ReStart button to reset the module. After finding the module, enter NetWork Setting interface to see if the amendments succeed.

10、Click “RemoDAQ-8366” shown in Figure to enter function application interface.

RemoDAQ-8366 Module User manual

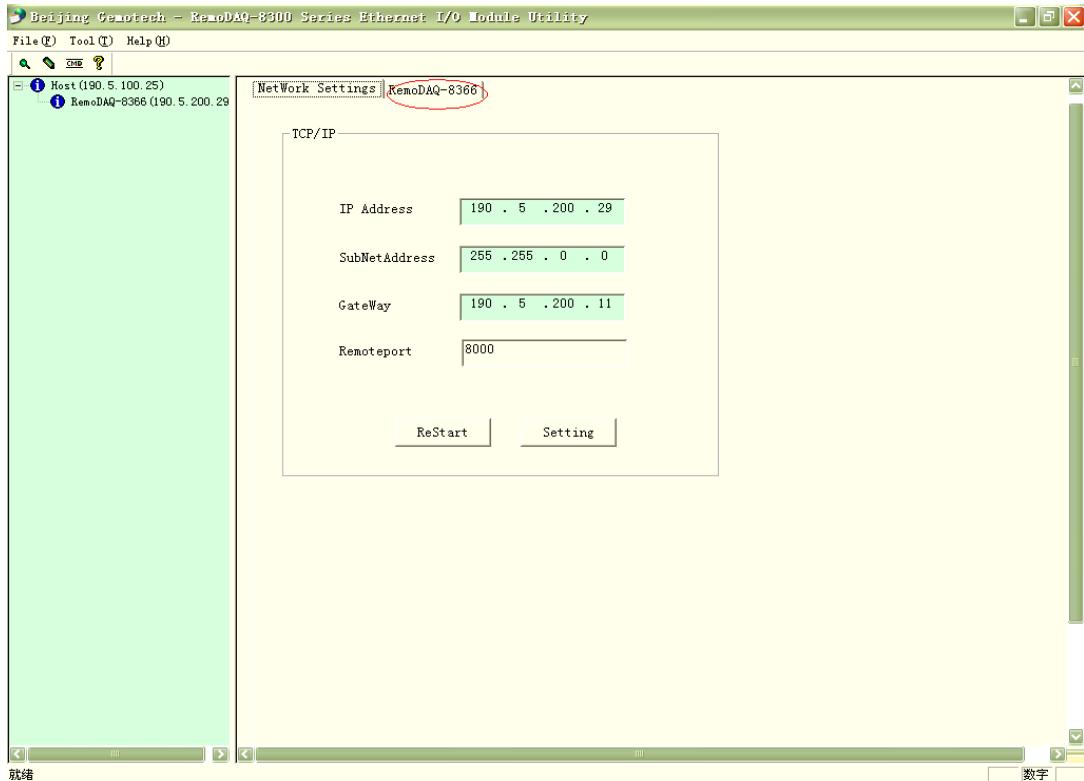


Figure3.8

Function application interface

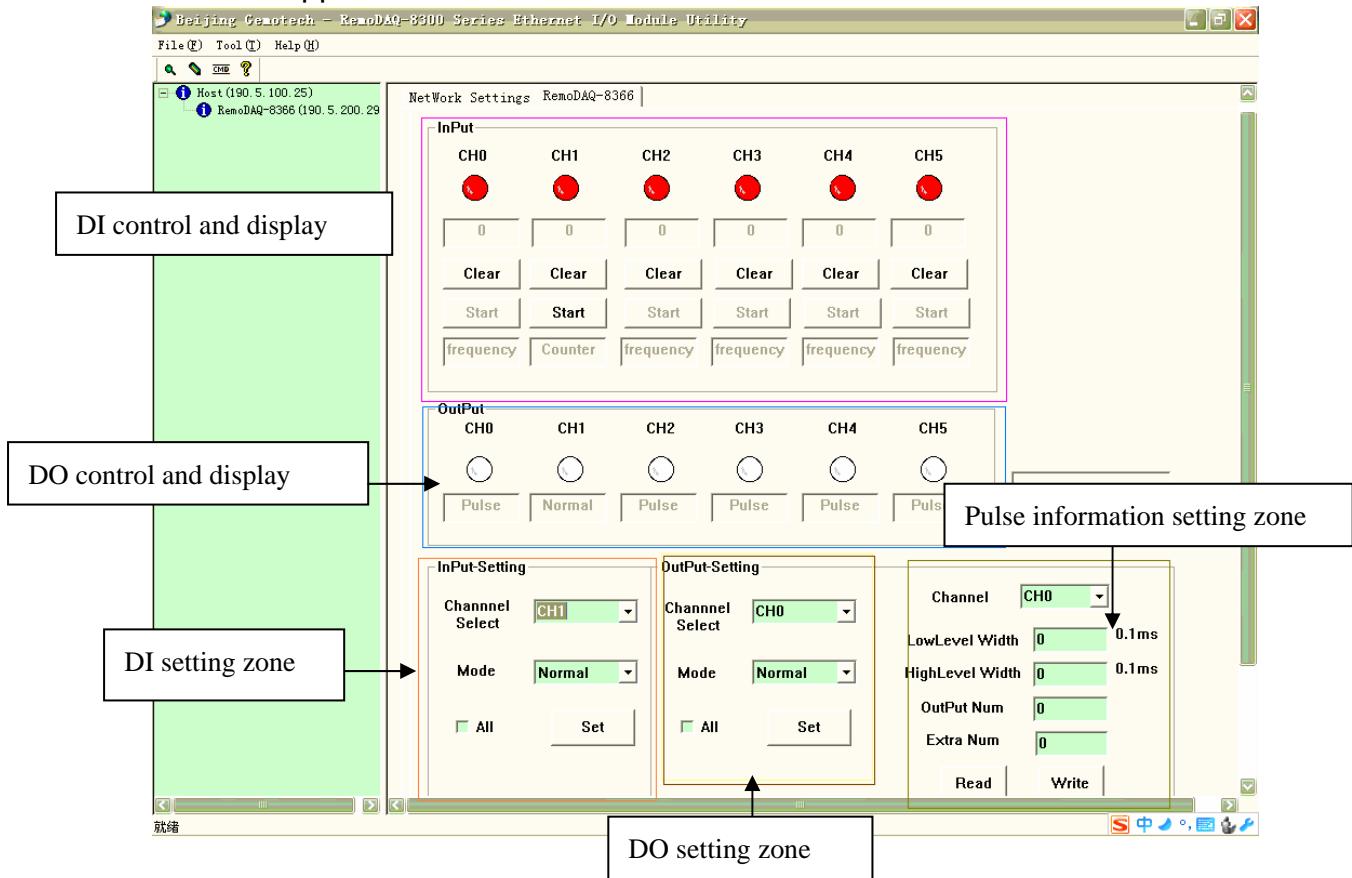


Figure3.9

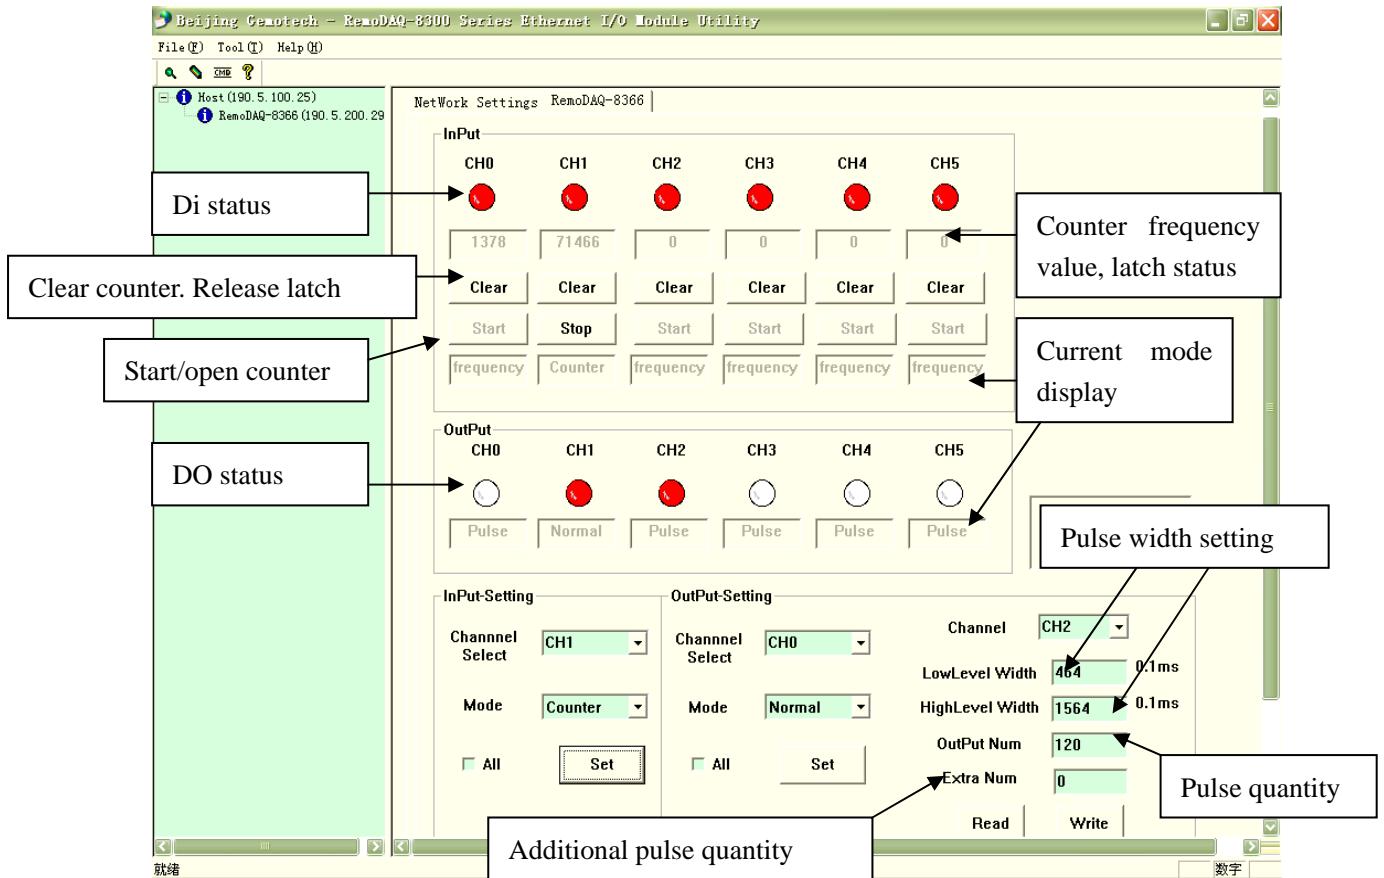


Figure3.10

Instructions:

1. When set channel output as Pulse output, the software could configure the high/low pulse width, pulse quantity, additional pulse quantity in real time. Write the configured pulse information to the module, like: clicking “Read” could show the information of this channel’s pulse setting information.
2. When set DI channel as H-L or L-H latch, and turn “low” to “high”, “input latch status” will be 1, at this time, the status will display **L-H ON** or **H-L ON**. Only when the user click “Clear”, could stop latch as **OFF**.